



Residential and commercial site



- A series of basins are being treated/monitored.
- This basin not being treated.

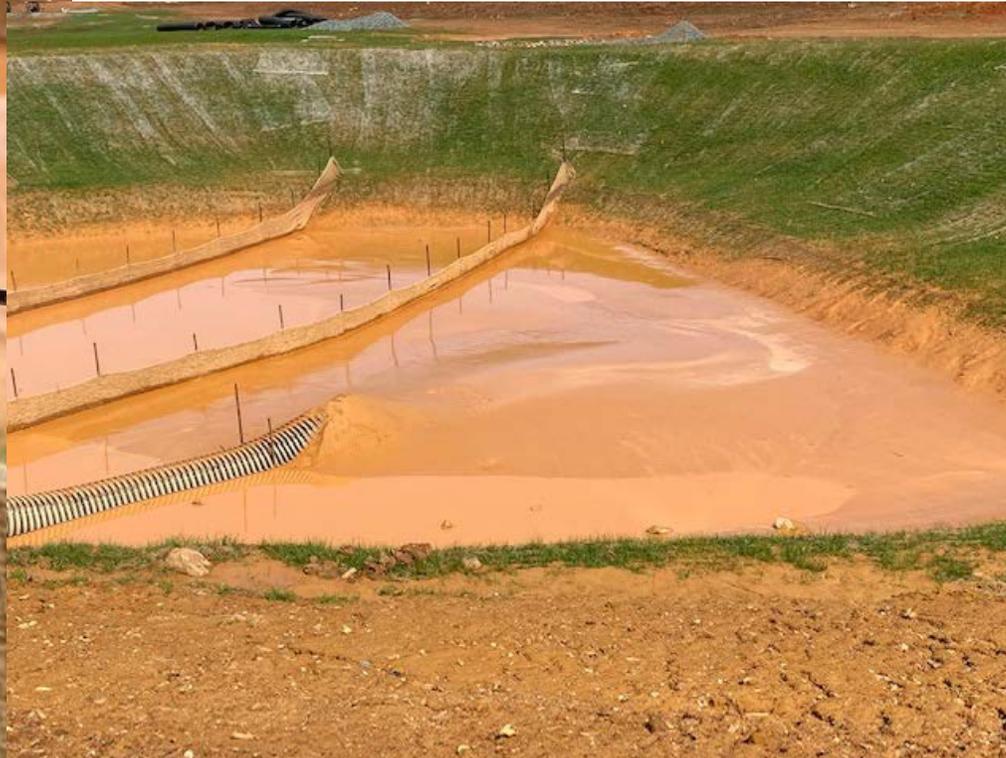

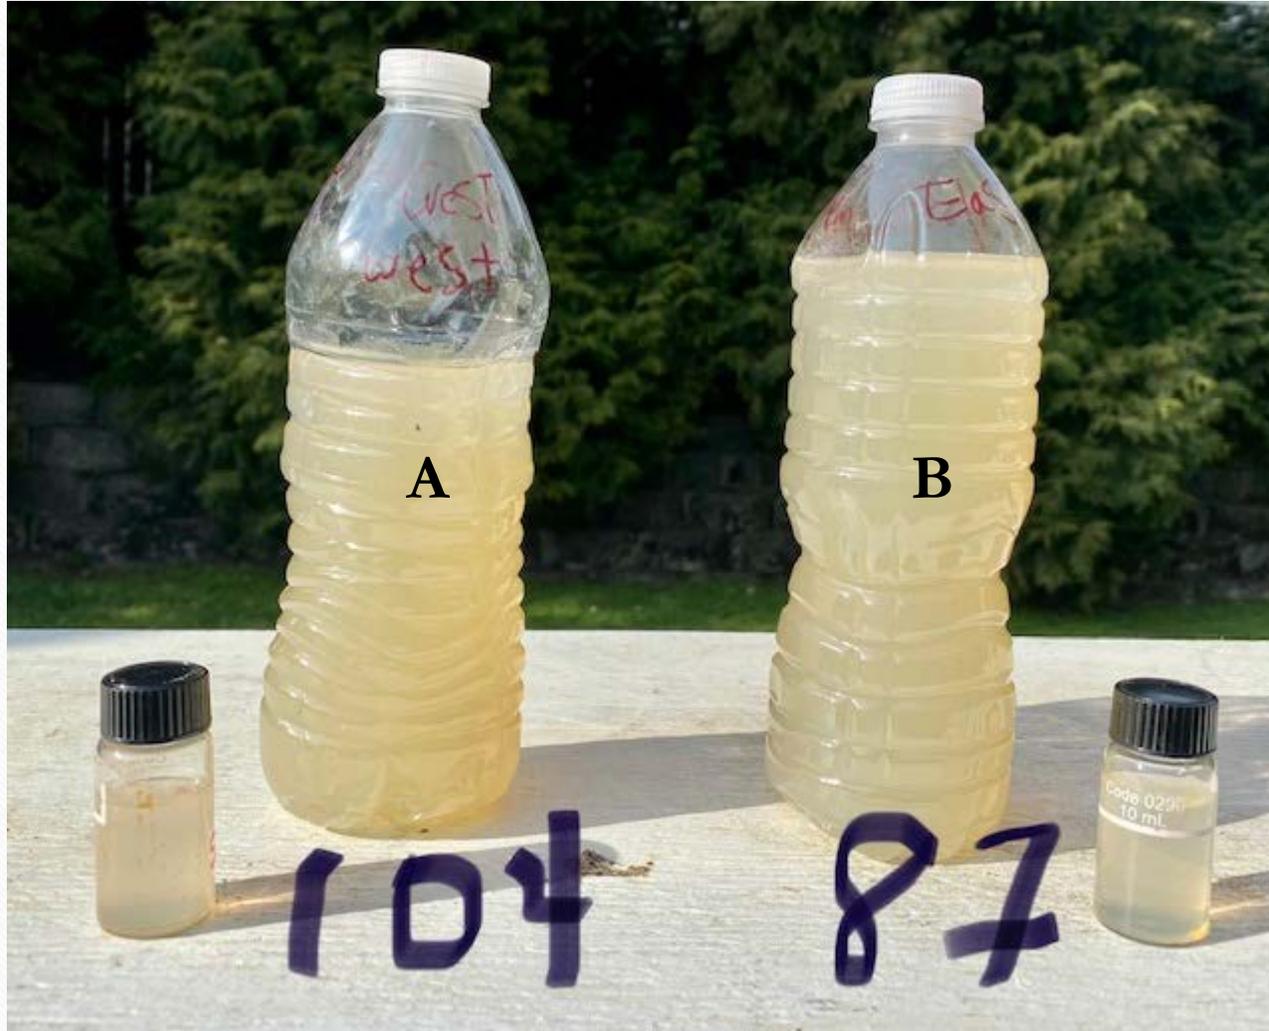

- Fluctuations occurring were dependent on BMPs functioning properly in homebuilding area
- Effervescent tablets in pipes entering basins. 1.5" rain event.



<3000 NTU



SB 2



SB 1






185 NTU

Evidence of flocs in sample bottles



36 NTU



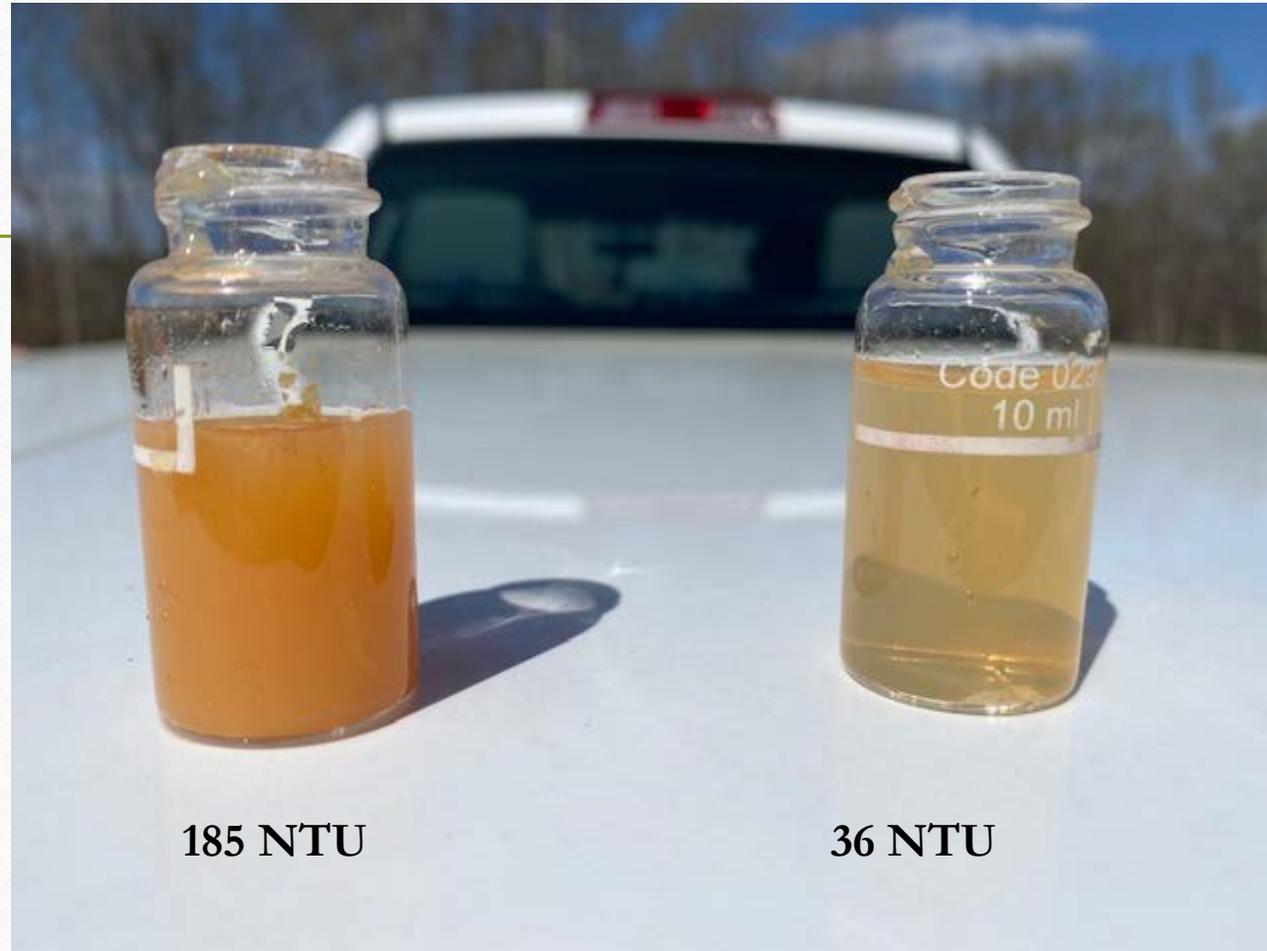

**Drainage area
constantly disturbed**

185 NTU

**Drainage area
more stabilized**

36 NTU

- Great stabilization
- Baffles
- Skimmer outlet



- Stabilized diversions
- Wattles

Flocculant Treatment in Pipes



- Tablets have dissolved

- Flocculation in pipe






20.2 NTU
at outfall of basin



115.3 NTU
In basin



Homebuilder site

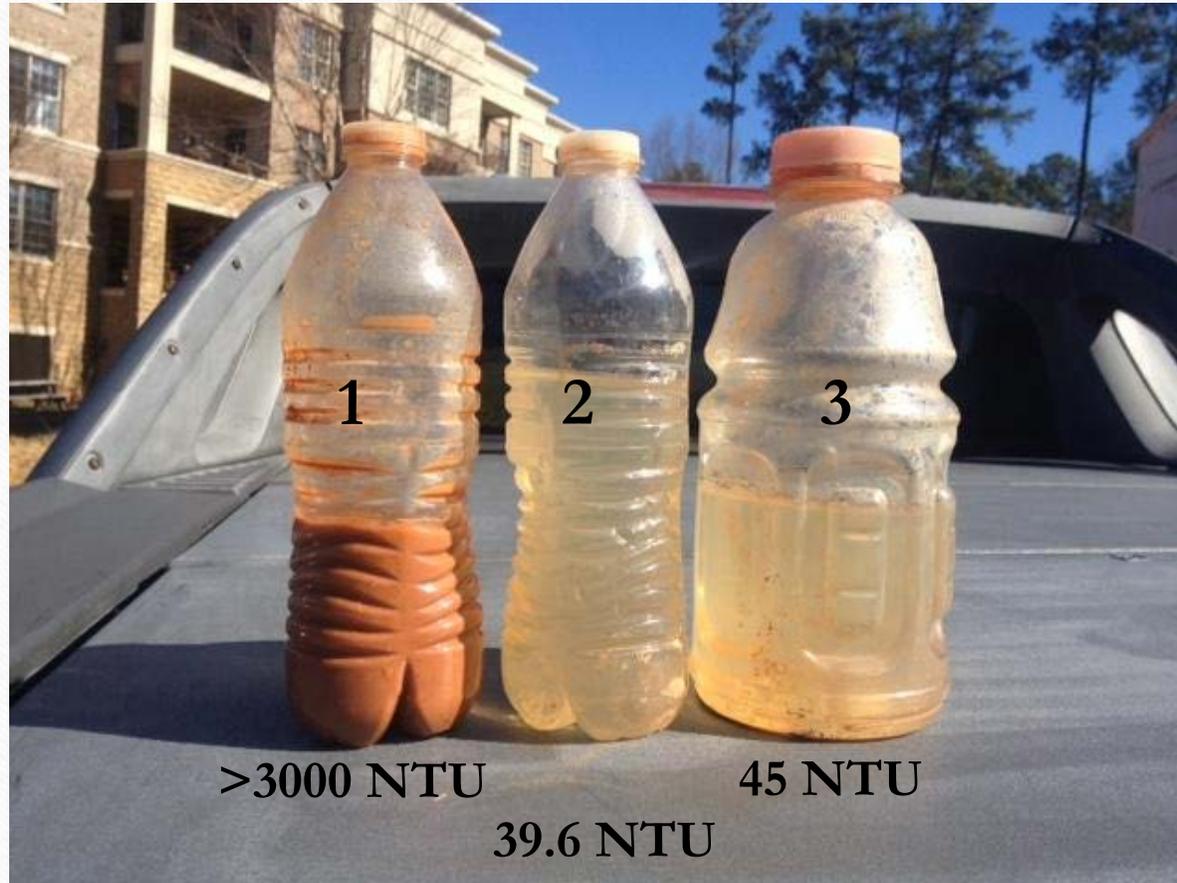

- **1- pre-pam application**
- **2- post-pam application, post 0.60" rain event, in basin near skimmer head.**
- **3- post-pam application, post 0.60" rain event, in basin at first baffle.**



Clean water
in the basin

Drop Inlets

A good option for granular pam



Effervescent Tablets in Flared End



Before storm, just after installation



After 0.6" rain event.
Notice flocculation in pipe



- Plunge pool at out fall of flared end entering basin.

Stone is stained with flocculated soil.

34 NTU

Capture Treated Water and Collect Floccs



Turbidity Discharge from Site



25.3 NTU

8.88 NTU

Water samples taken from:

- 1- the flared end directly discharging the skimmer pipe
- 2- the silt fence outlet beyond the outfall of the skimmer outfall.

Multiple treatment zones



-
- **Wattles**
 - **Rock inlet protection**
 - **Lined ditches**
 - **Slope drain**


Effervescent Tablets

- August 2012- series of tests were performed with Effervescent Tablets and proprietary geotextile dewatering bag
- 3 storm events occurred in a row within a sack without cleaning.
- The silt sack was tested with and without the addition of the polyacrylamide.
- Turbidity and TSS were measured

Sediment laden water running over the Effervescent Tablets



% Reduction in turbidity after adding Effervescent Tablets to the testing

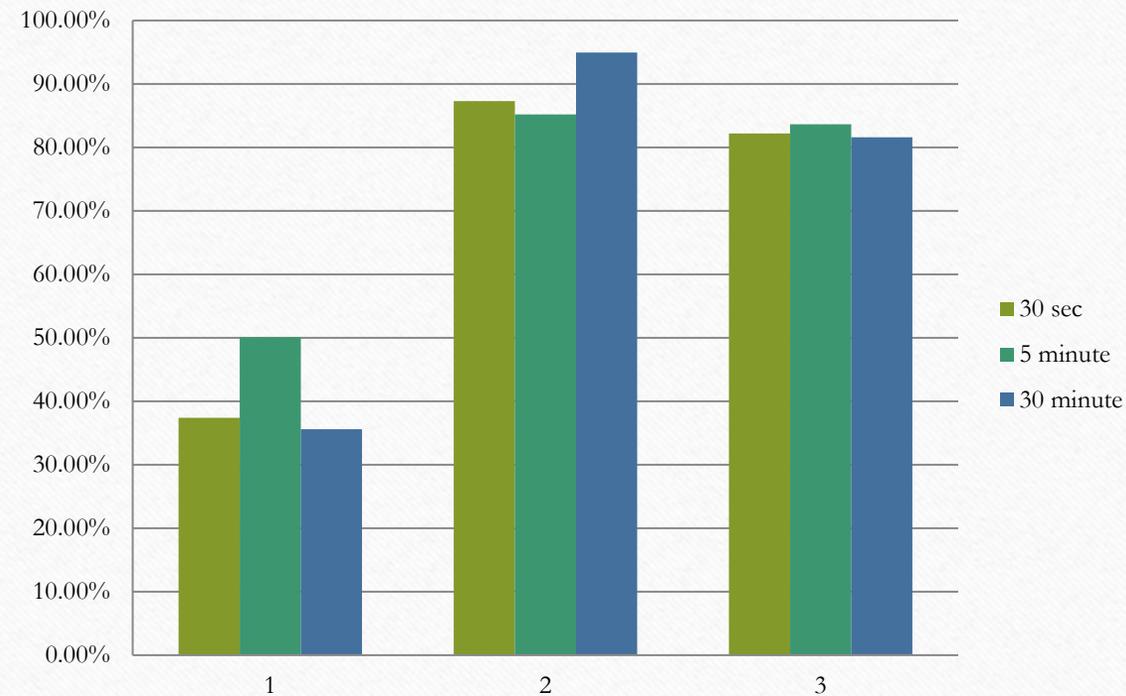


When comparing the 2 treatments (inlet bag performance with and without PAM), turbidity reduction was significant.

Geotextile Dewatering Bag and Effervescent Tablets Gravity Flow testing



Effervescent Tablet and Geotextile Dewatering Bag Preliminary Test

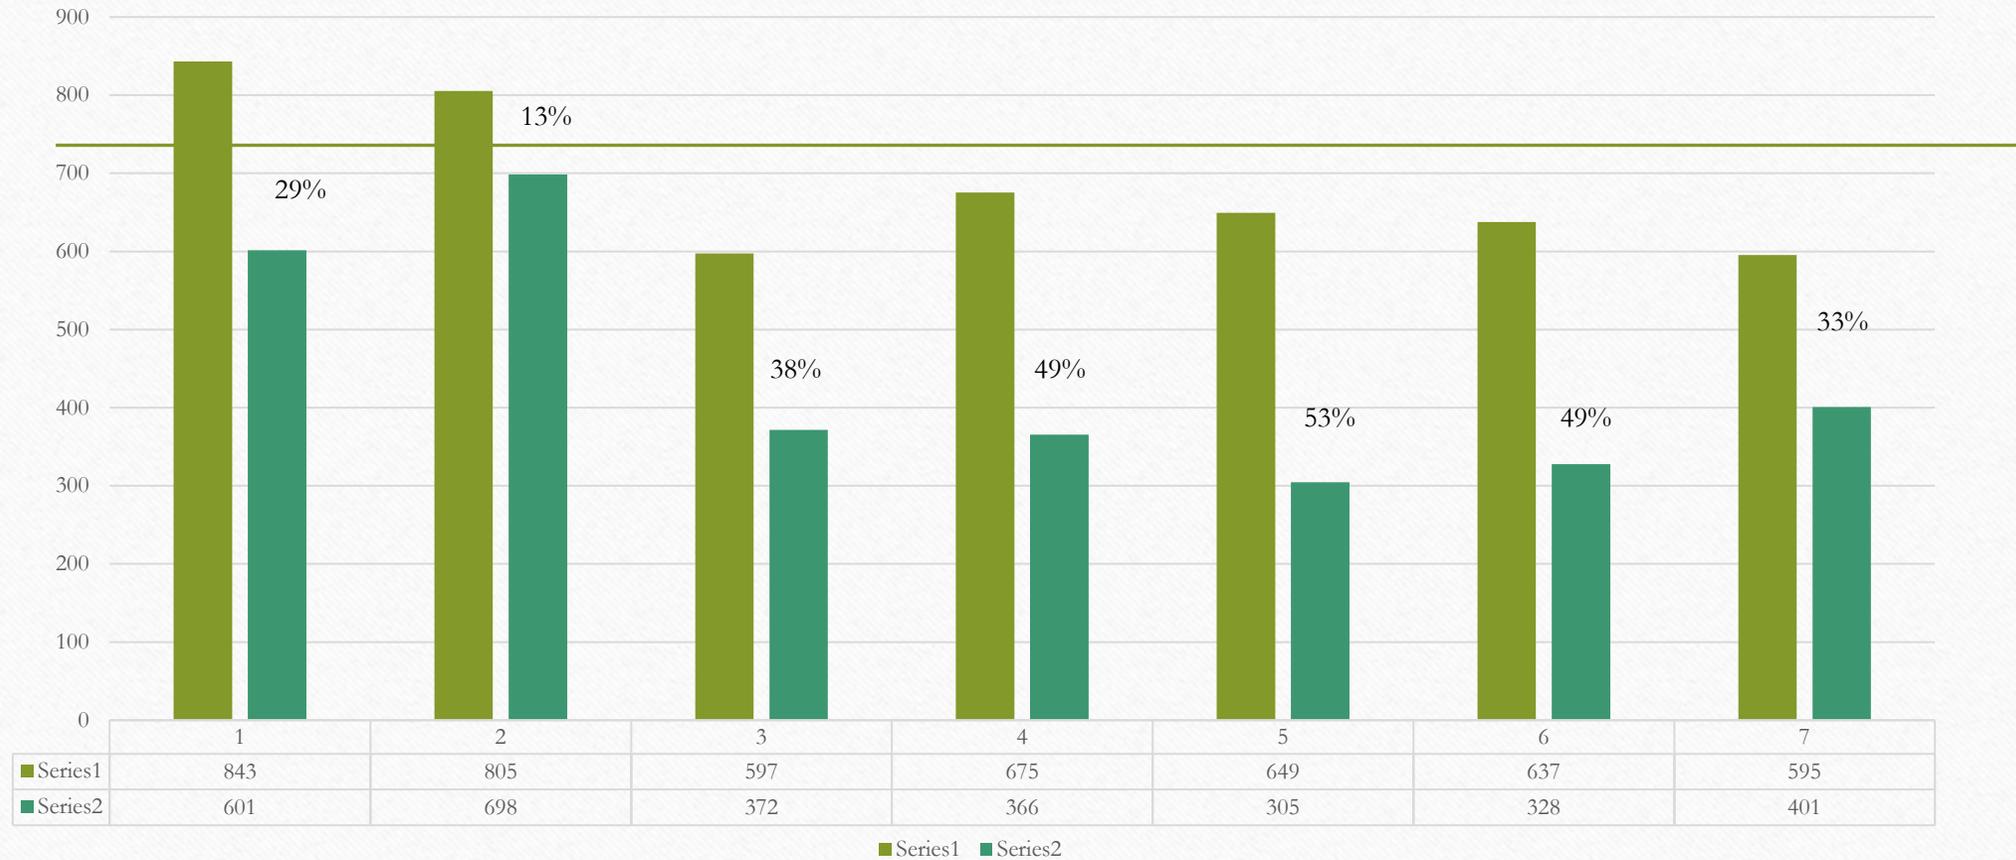



Product information:

GeoScrub Bubbles (effervescent tablets)
GeoScrub Anionic Series (10, 20, 23, 30)

All product information can be found
at www.ntuinc.com

Melanie McCaleb, CPESC
NTU, Inc
melanie@ntuinc.com

919-412-7537
www.ntuinc.com

Questions? Feel free to give me a call or shoot me
an email.